

Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi

Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 Upute za rad
 Manual de operatii
 Treoracha Oibriúcháin
 Οδηγίες χρήσης
 El Kitabi
 Инструкции за експлоатация
 Инструкция по эксплуатации
 取扱説明書
 사용설명서
 使用说明书

DVT 3.80

2006/42/EG









DIN EN ISO 14001:2005









DIN EN ISO 9001
001929 QM



		MAX. PRESSURE MAX. VACUUM		mbar
		MAX.		m³/h
AIR			DIN EN ISO 3744	$L_{pA} = 76 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 77 \text{ dB(A)} - 60\text{Hz}$ $K_{pA} = 3 \text{ dB(A)}$

			<p>72 kg 159 lbs</p>	$A > 100\text{mm}$ $A > 4"$	<p>> 5°C/41°F < 45°C/113°F</p>	<p>max. 90%</p>	<p>max. 800m</p>
1 				2 			

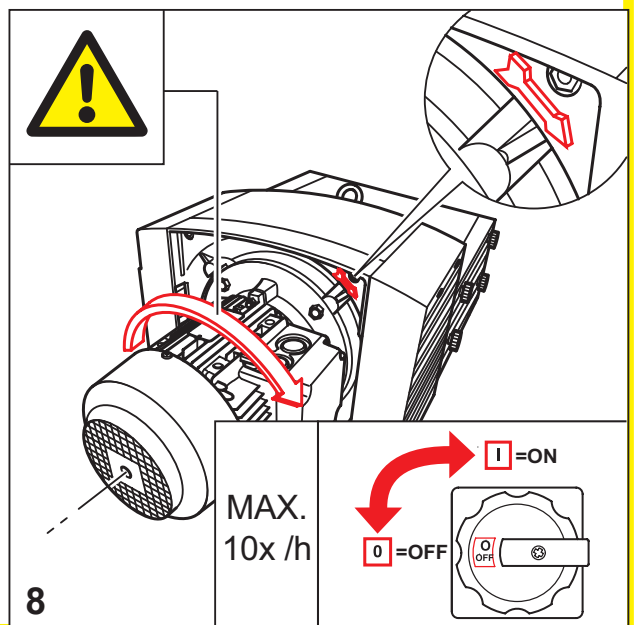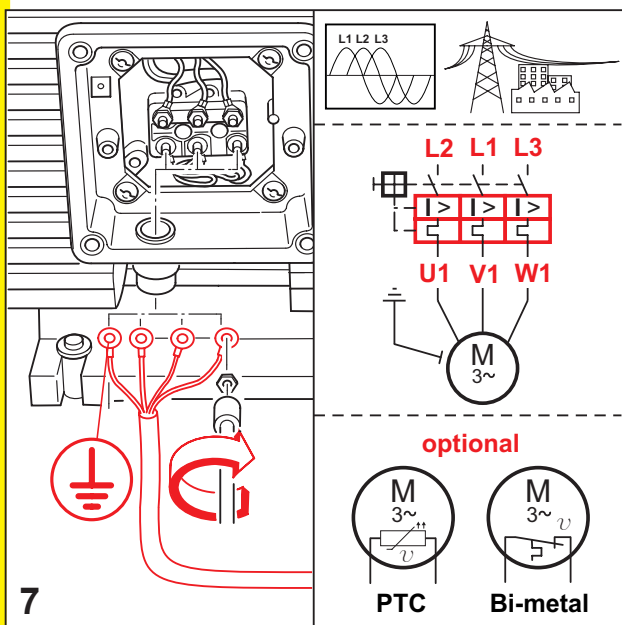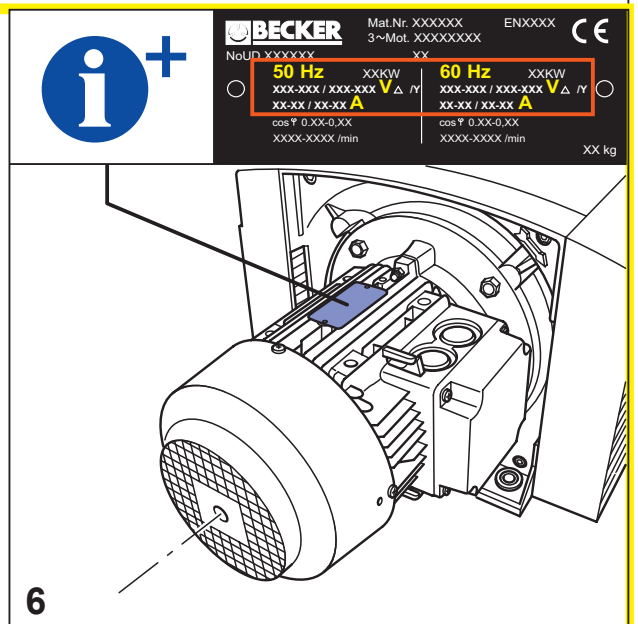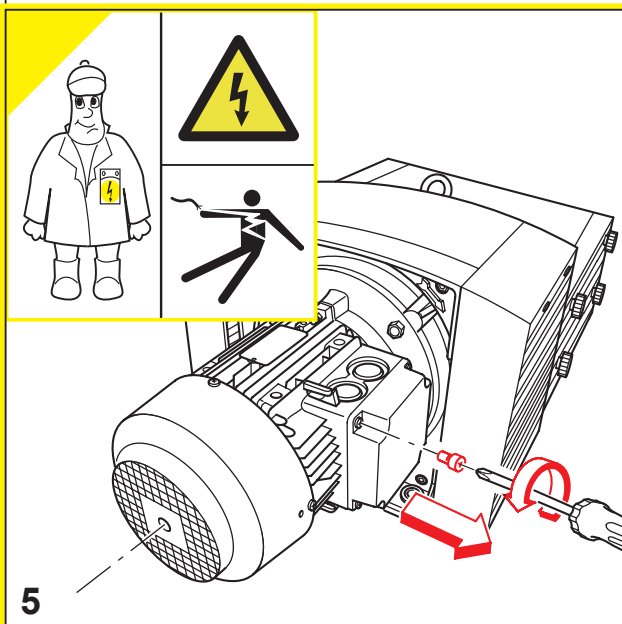
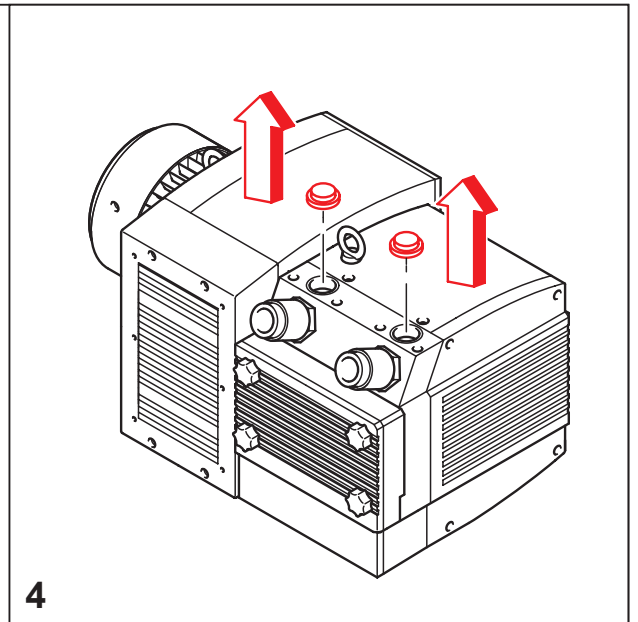
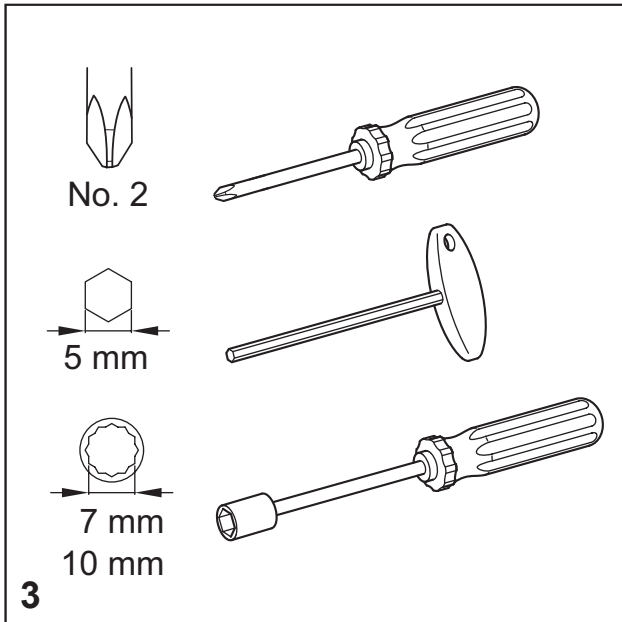



i+	BECKER Mat.Nr. XXXXXX ENXXXX CE	
	3~Mot. XXXXXXXX	
	50 Hz	60 Hz
	XXKW	XXKW
	XXX-XXX / XXX-XXX V Δ / Y	XXX-XXX / XXX-XXX V Δ / Y
	XX-XX / XX-XX A	XX-XX / XX-XX A
	cos φ 0.XX-0.XX	cos φ 0.XX-0.XX
	XXXX-XXXX /min	XXXX-XXXX /min
		XX kg

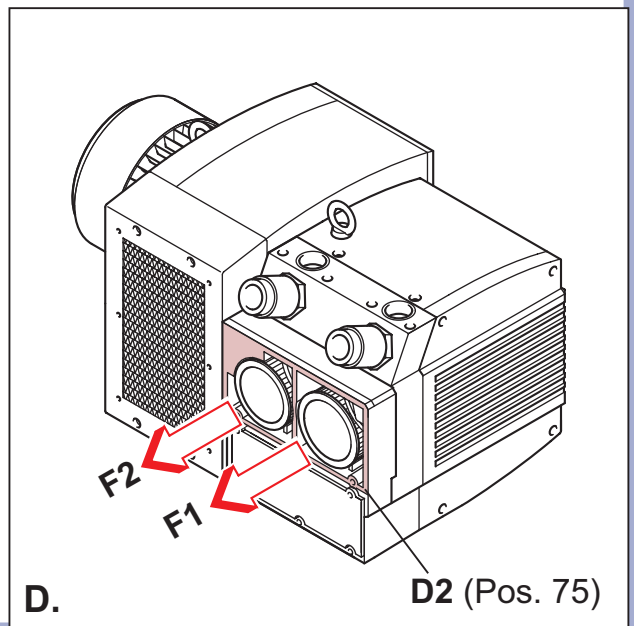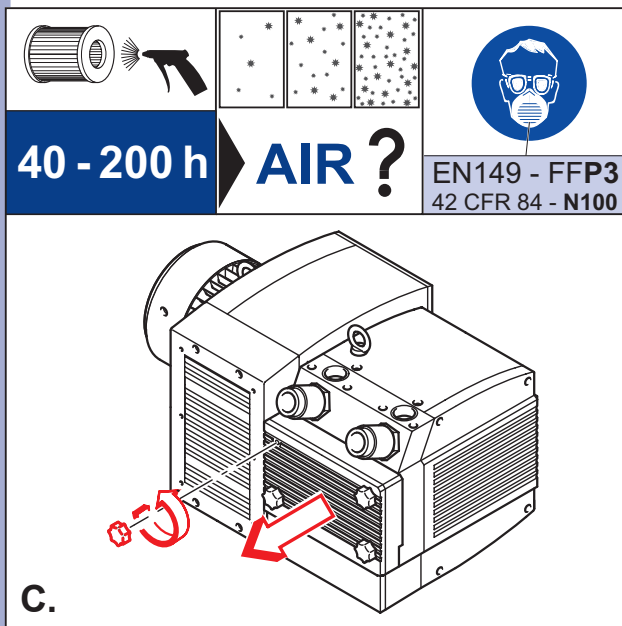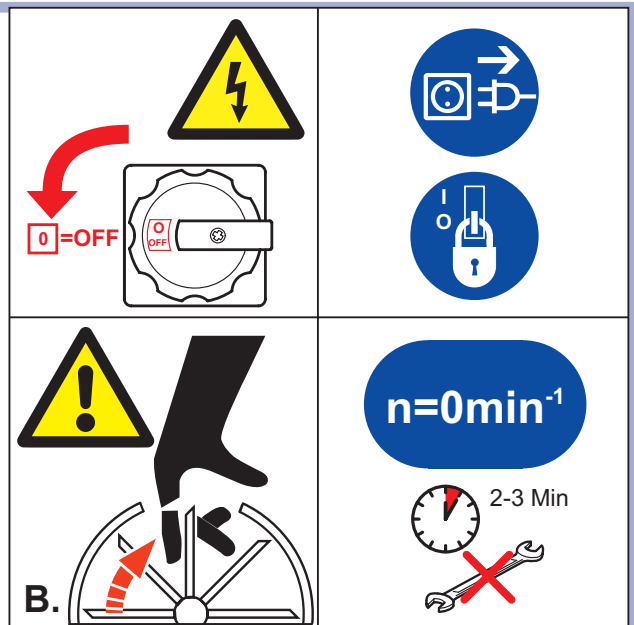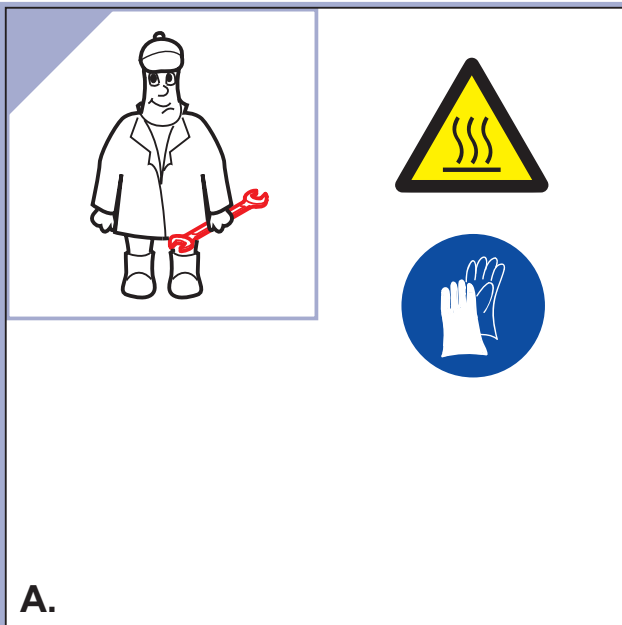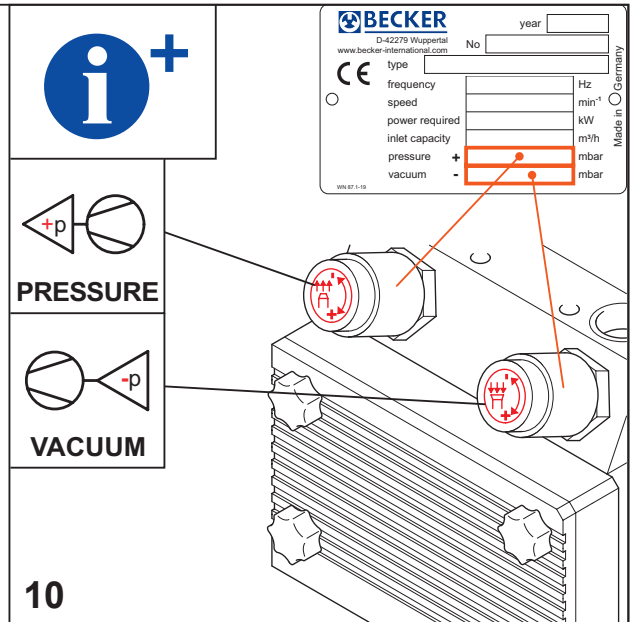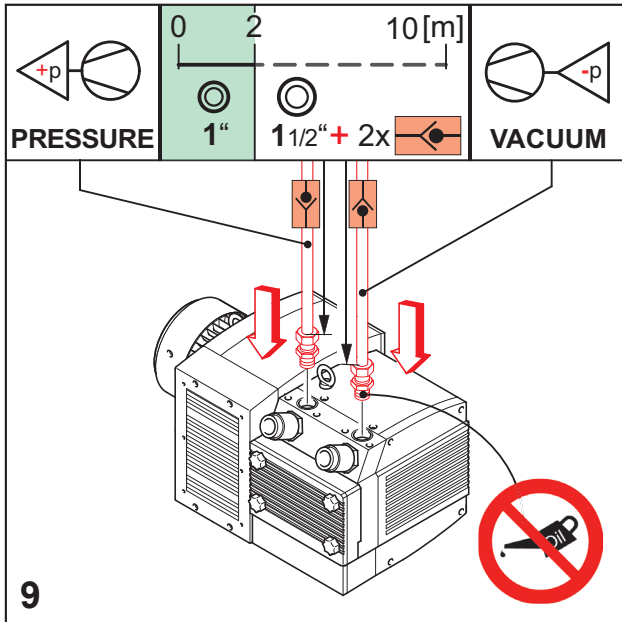
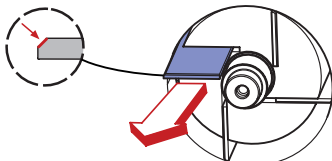
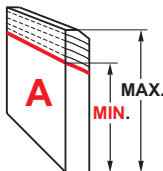


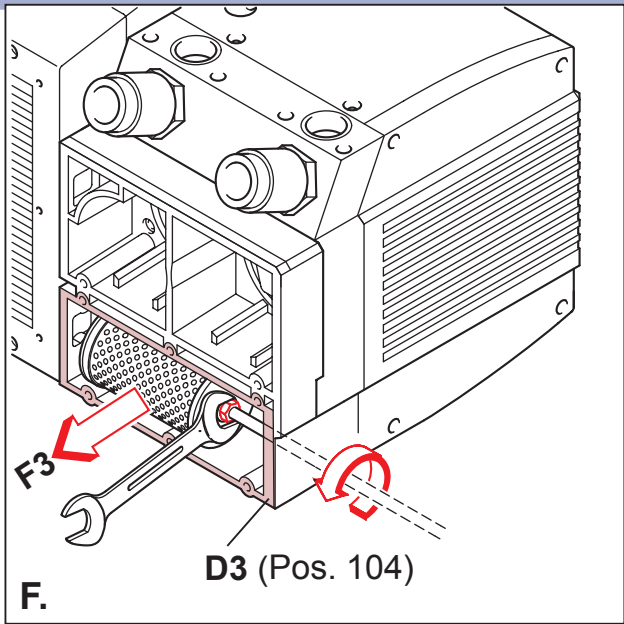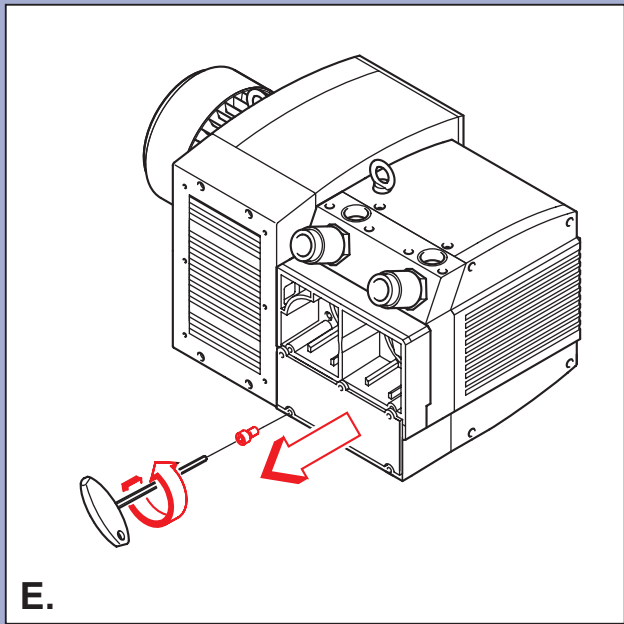

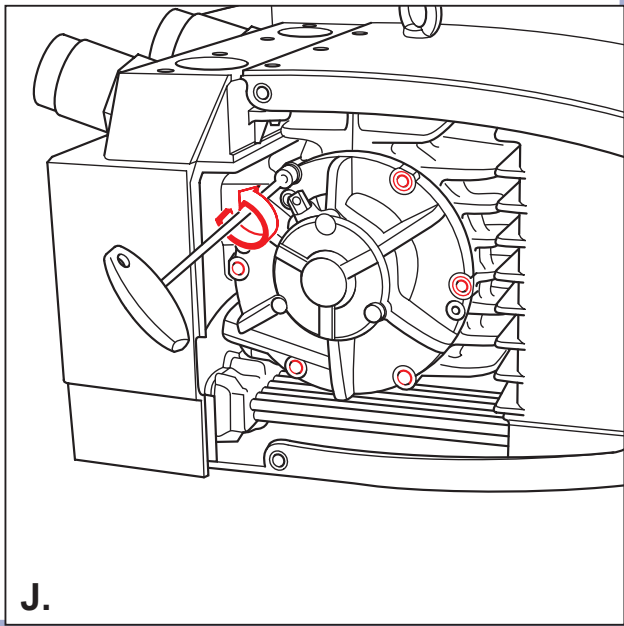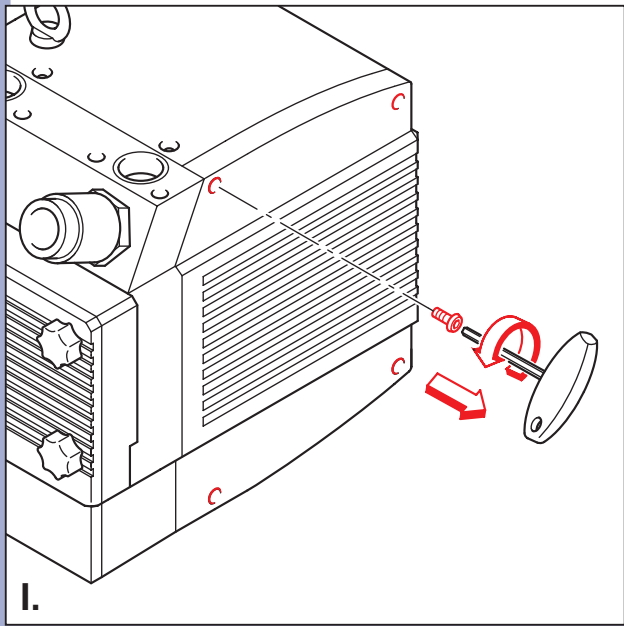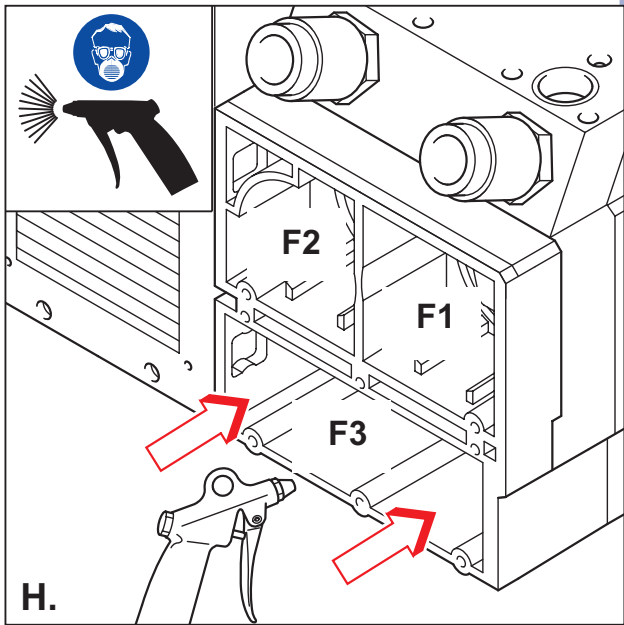





<p>F1 No.: 909507</p>	<p>F2 No.: 909506</p>	<p>F3 No.: 909510</p>
	<p>Satz / Kit Pos.: 17, 20, 24, 62, 75, 76, 85, 86, 104, 122, 125, 126, 146 No.: 549000 21100</p>	

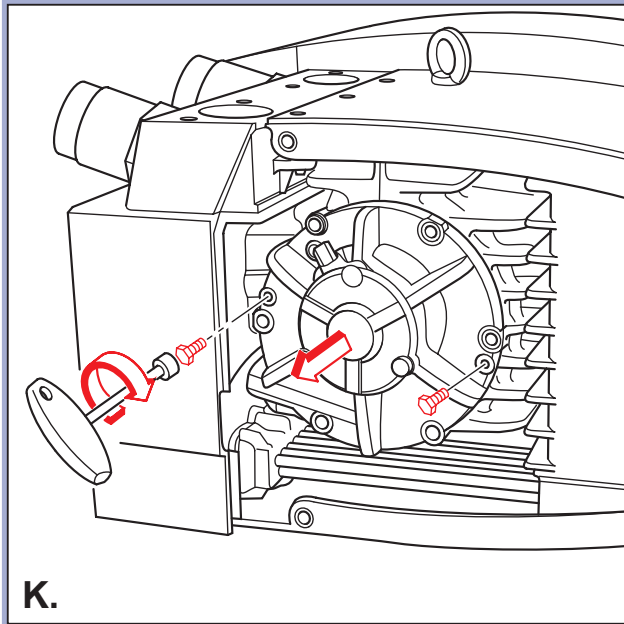




 3000 h	
	$A_{MAX} = 39mm$ $A_{MIN} = 26mm$ $A_{T} < 26mm$ → 
 → No. 9013300007 (SET)	

L.

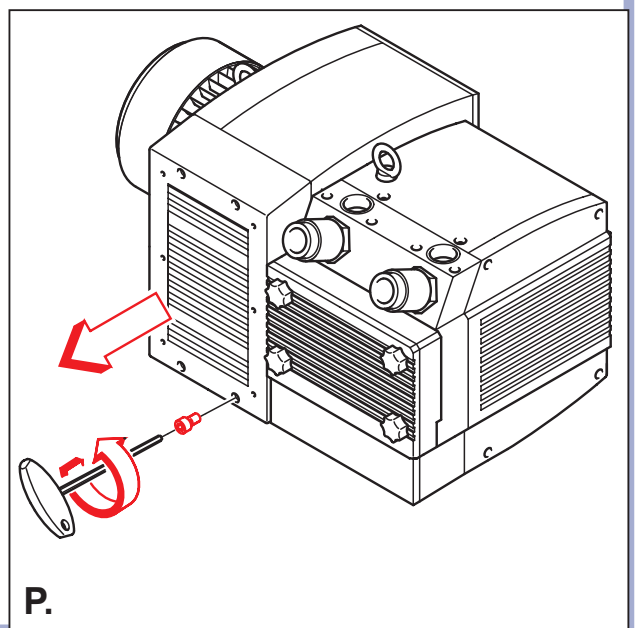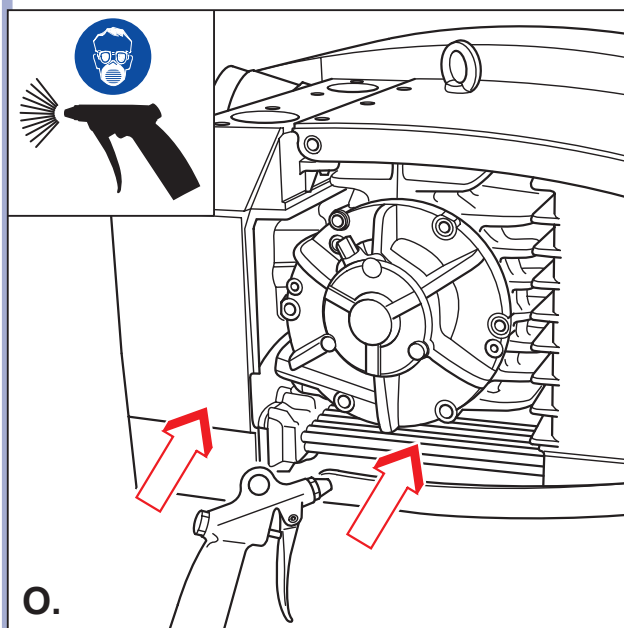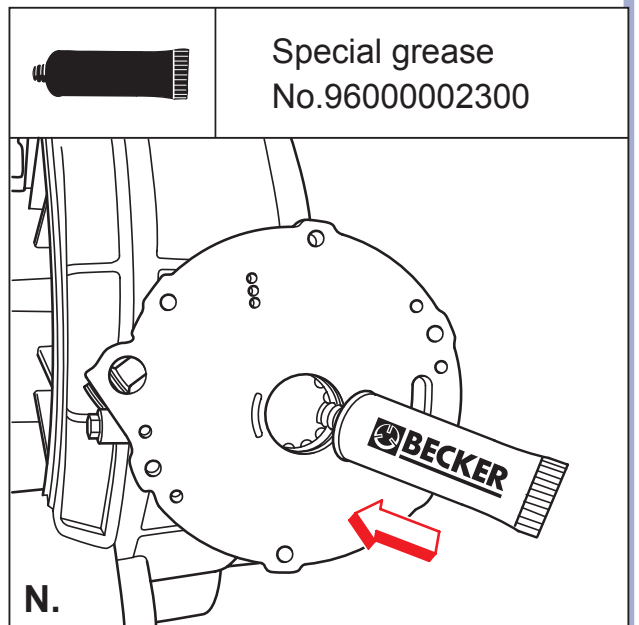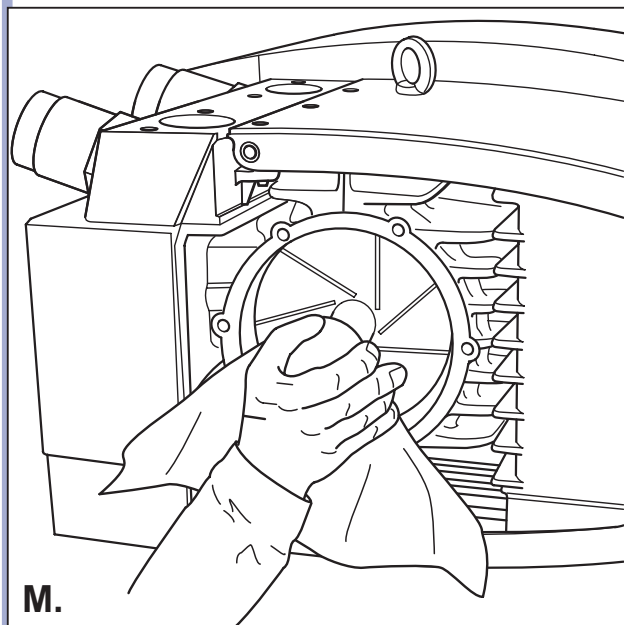

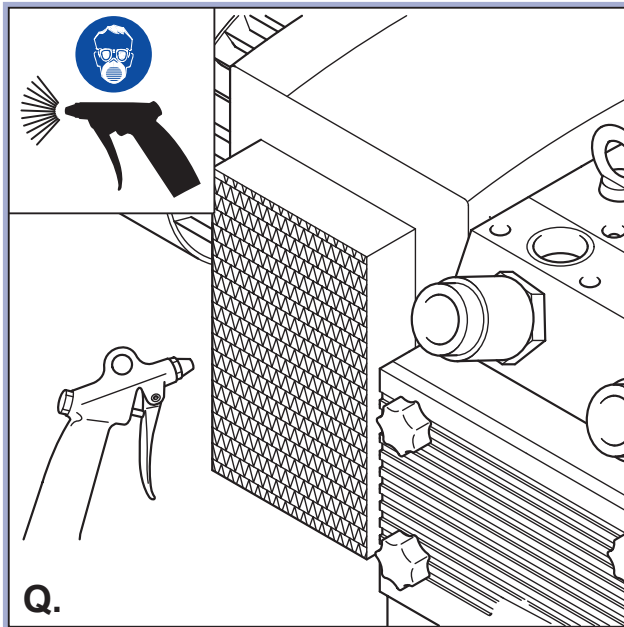

A	6x	11Nm
B	4x	3Nm
C	4x	3Nm

R.

www.becker-international.com

Gebr. Becker GmbH
 Hölker Feld 29-31
 D-42279 Wuppertal
info@becker-international.com

SERVICE
www.becker-international.com
 Sales and service network