

Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi

Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 Upute za rad
 Manual de operatii
 Treoracha Oibríúcháin
 Οδηγίες χρήσης
 El Kitabi
 Инструкции за експлоатация
 Инструкция по эксплуатации
 取扱説明書
 사용설명서
 使用说明书


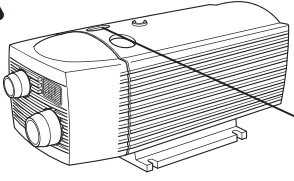


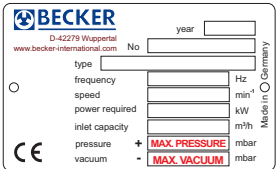

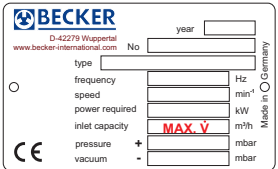





T 4.10 DV

 


 

 





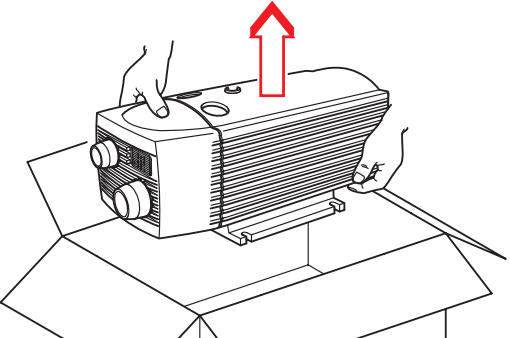

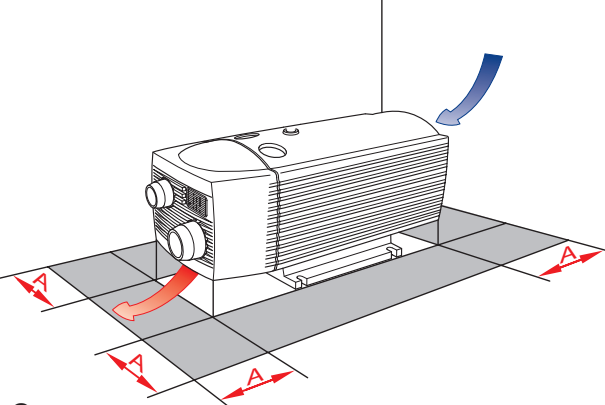
2006/42/EG

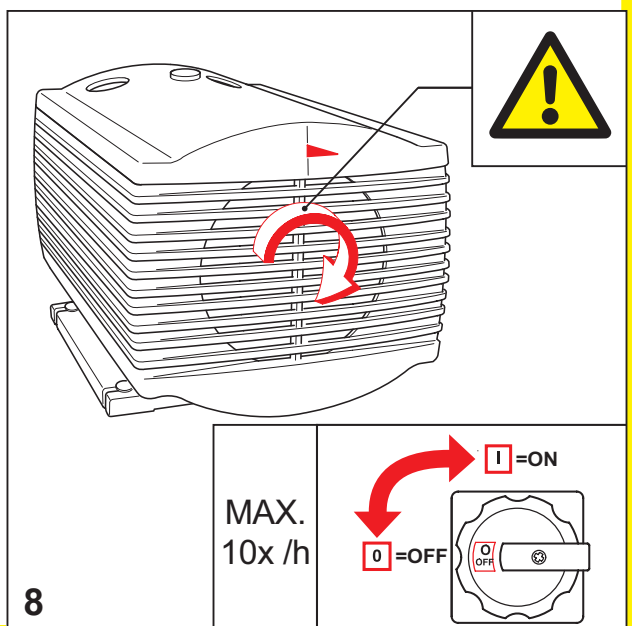
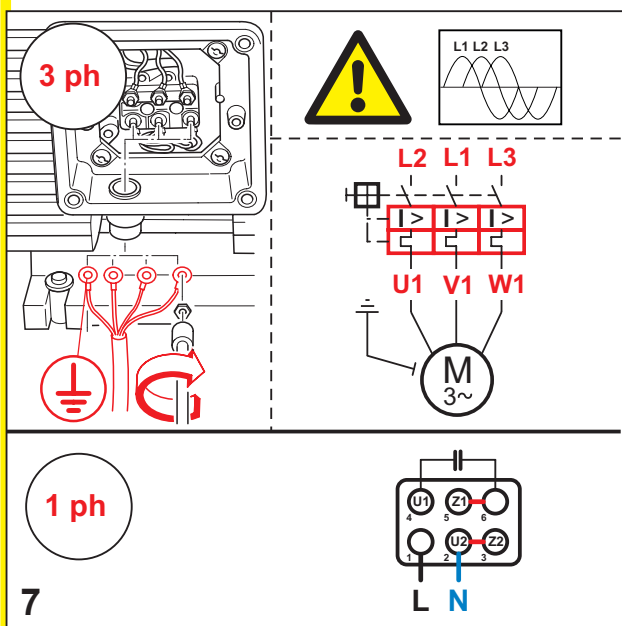
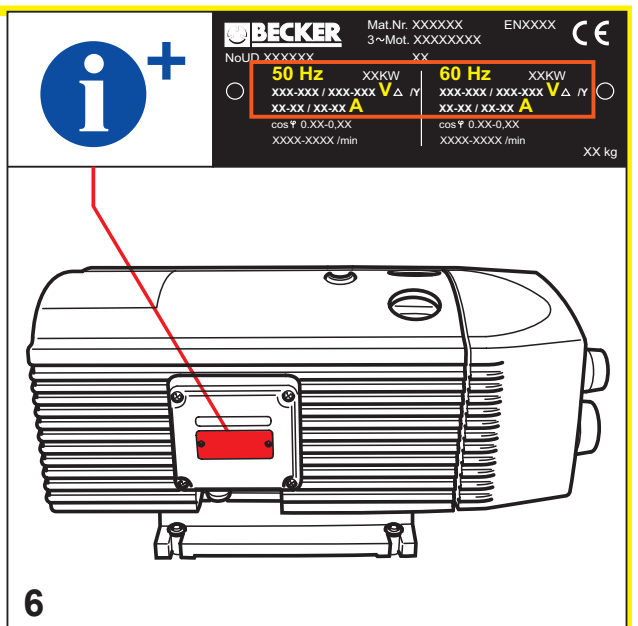
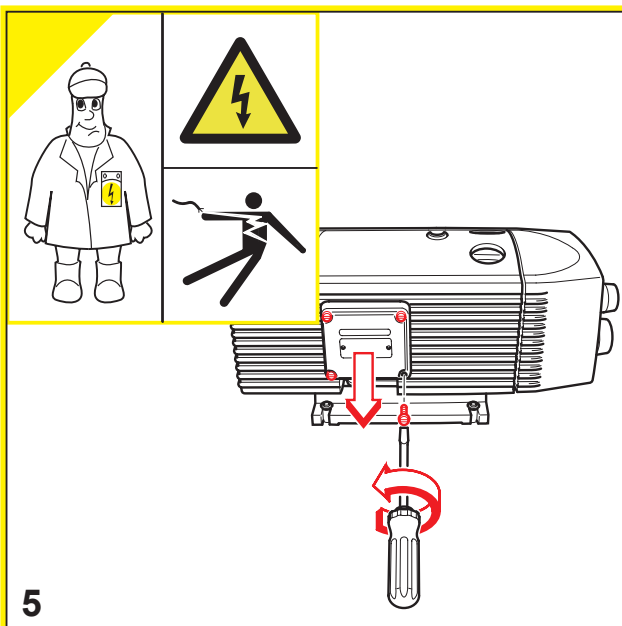
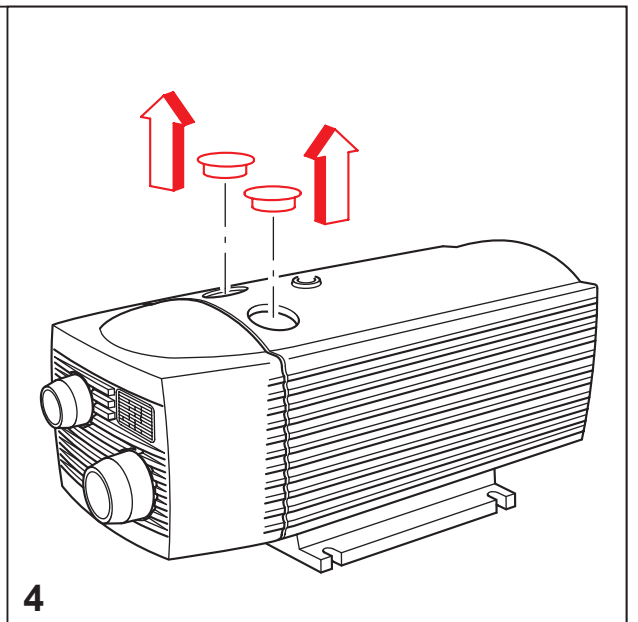
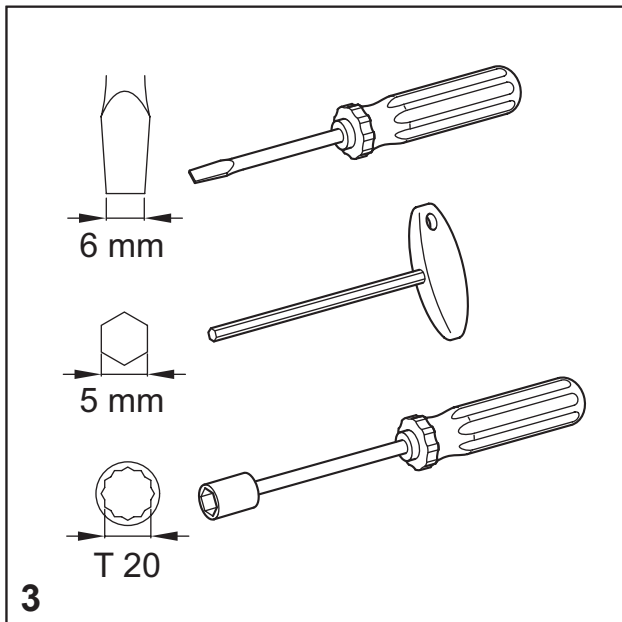


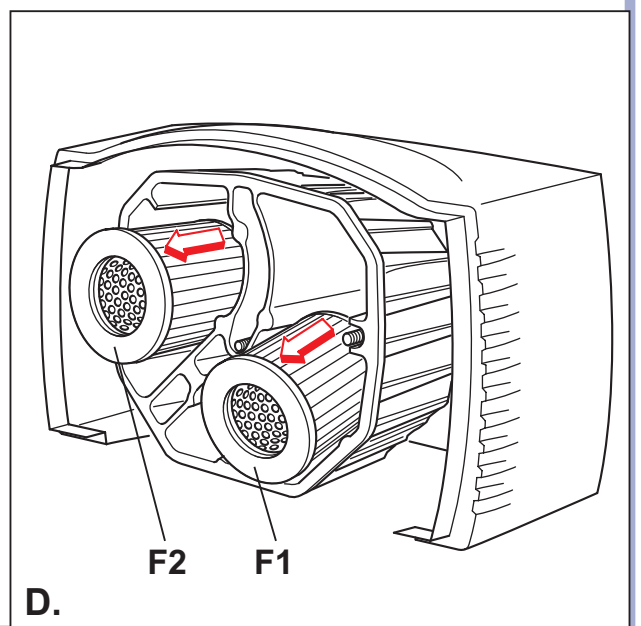
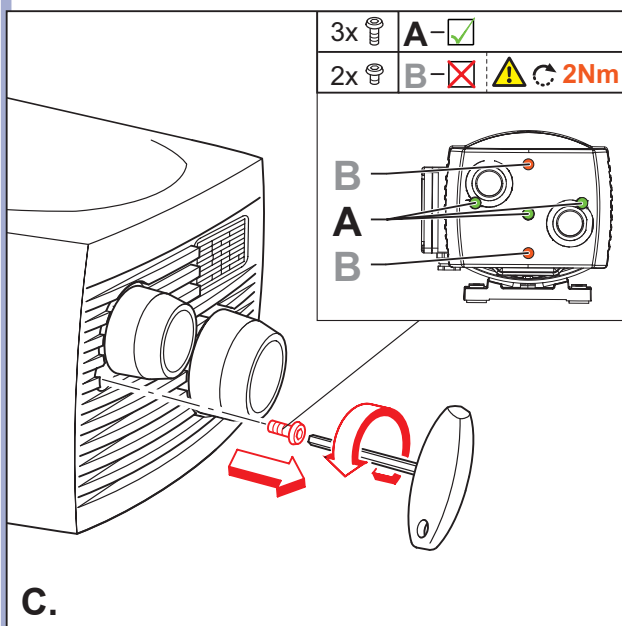
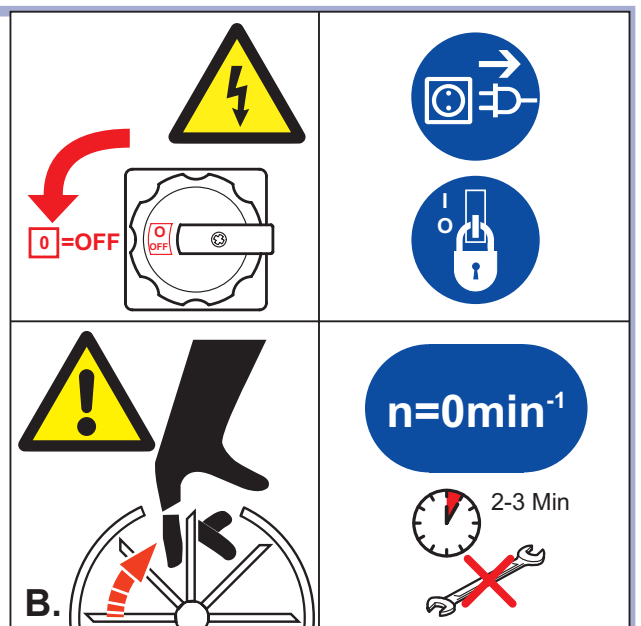
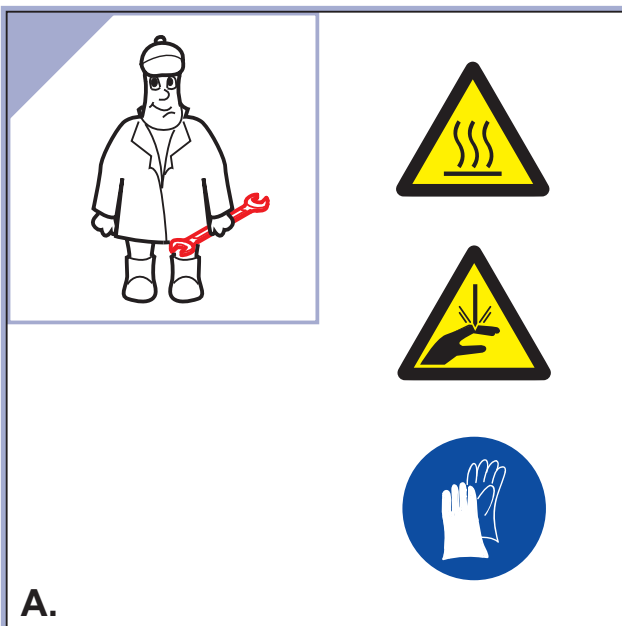
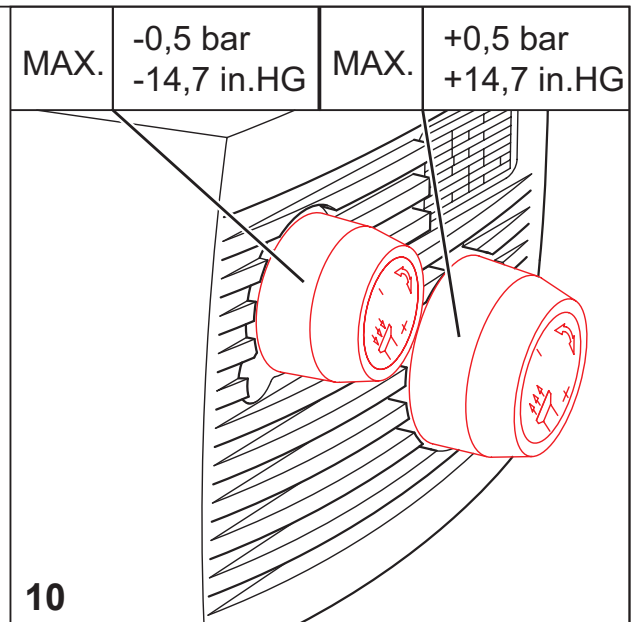
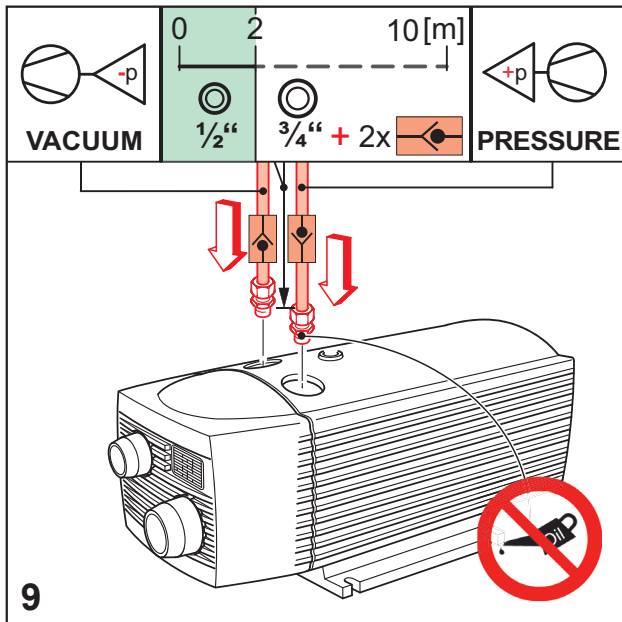
DIN EN ISO 14001:2005



 
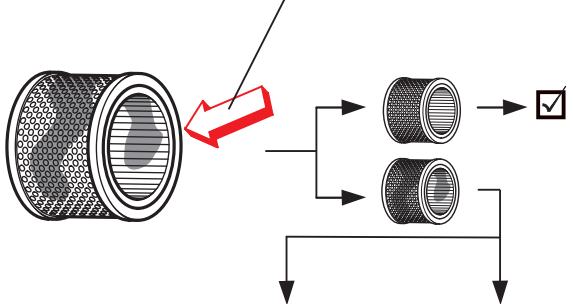
DIN EN ISO 9001
001929 QM

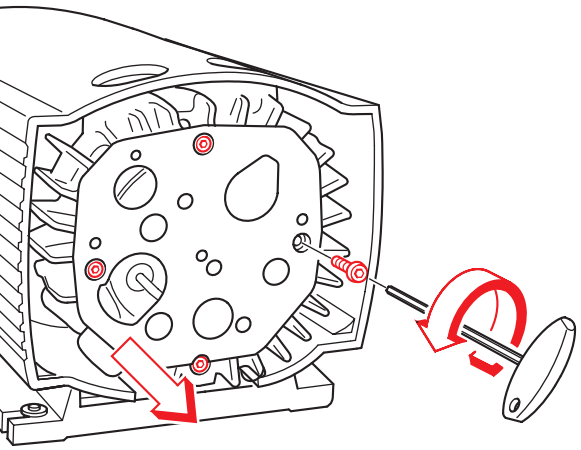
 			MAX. PRESSURE MAX. VACUUM		mbar
			 MAX.		m³/h
			DIN EN ISO 3744	L_{pA} = 55 dB(A) - 50Hz L_{pA} = 58 dB(A) - 60Hz K_{pA} = 3 dB(A)	
<input checked="" type="checkbox"/> AIR					

				A > 100mm A > 4"	 > 5°C/41°F < 45°C/113°F	 max. 90%	 max. 800m
<input checked="" type="checkbox"/>							
1			 16,0 kg 35,3 lbs	2 			


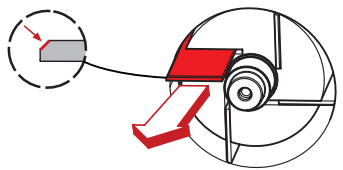
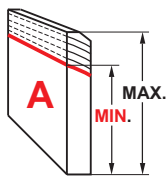





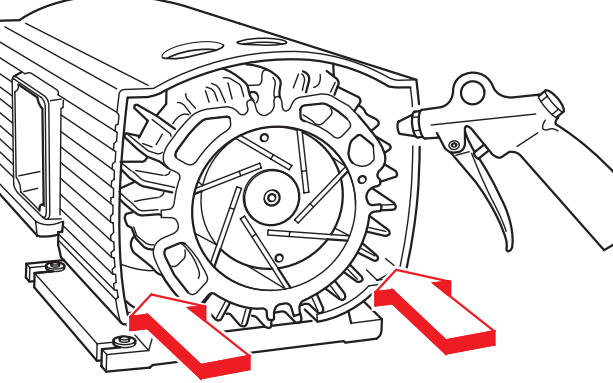



		
		
E.	F1 D: 38 mm H: 38 mm No.: 909518	F2 D: 39 mm H: 40 mm No.: 909554



F.

	
3000 h	
	A_{MIN} > 18mm A_{MIN} < 18mm
	
T 4.10 DV → No. 90132700007 (SET)	
G.	

	
	
H.	



www.becker-international.com

BECKER

Gebr. Becker GmbH
Hölker Feld 29-31
D-42279 Wuppertal
info@becker-international.com

SERVICE
www.becker-international.com
Sales and service network

